SkyFlex Delta Series



Tools, equipment






















Iten	n Drawings	Qty	Item	Drawings	Qty
1		1	13		4
2		1	14		16
3		1	15	M8	6
4		1	16	M10	32
5		4	17	M10	16
6	39.	4	18	0 0	14
7	•	3	19		42
8	•	1	20		42
9		1	21		42
10		1	22	M6	8
11		18	23		16
12		3	24		1

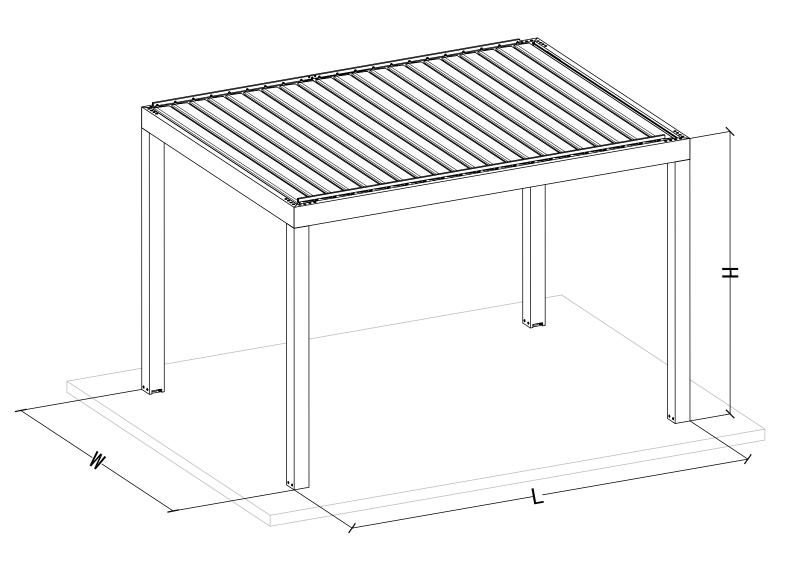


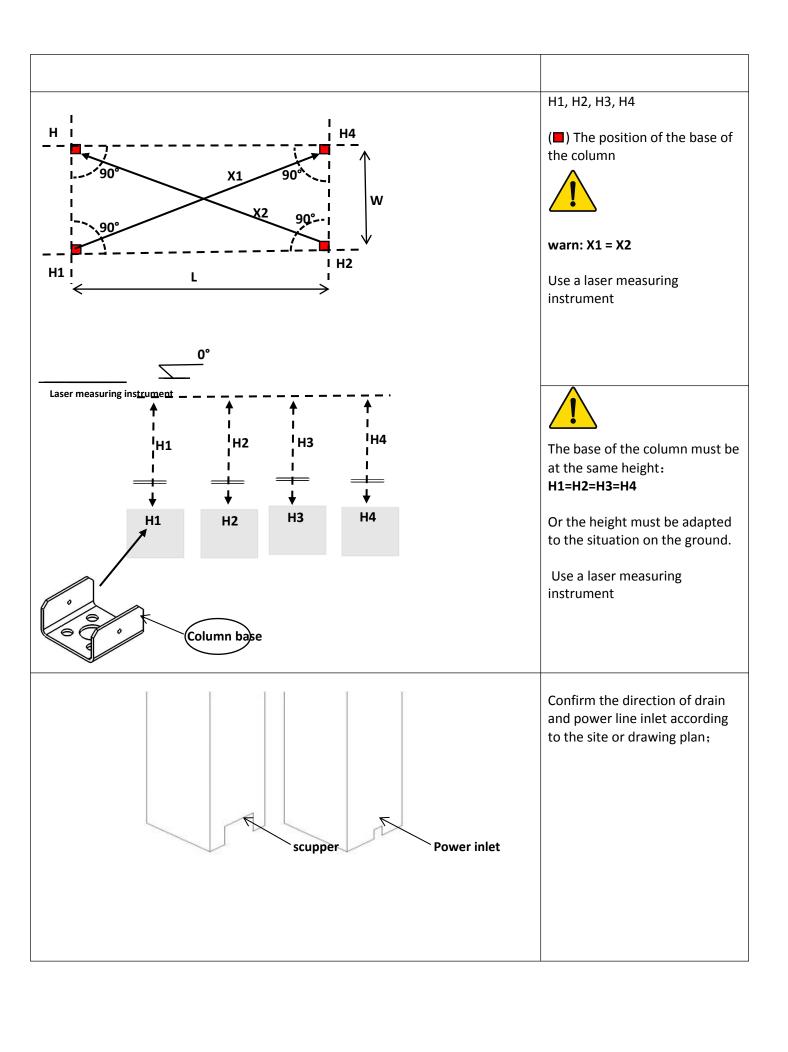


Step 1 Ground drilling

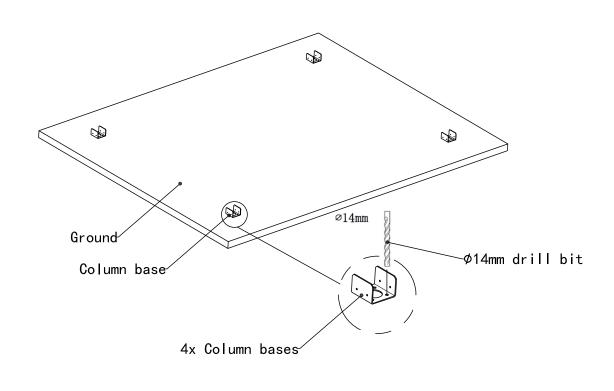


Step 2 Tighten the Column base

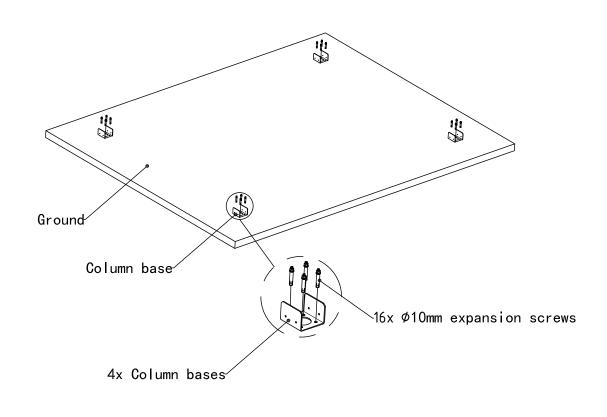


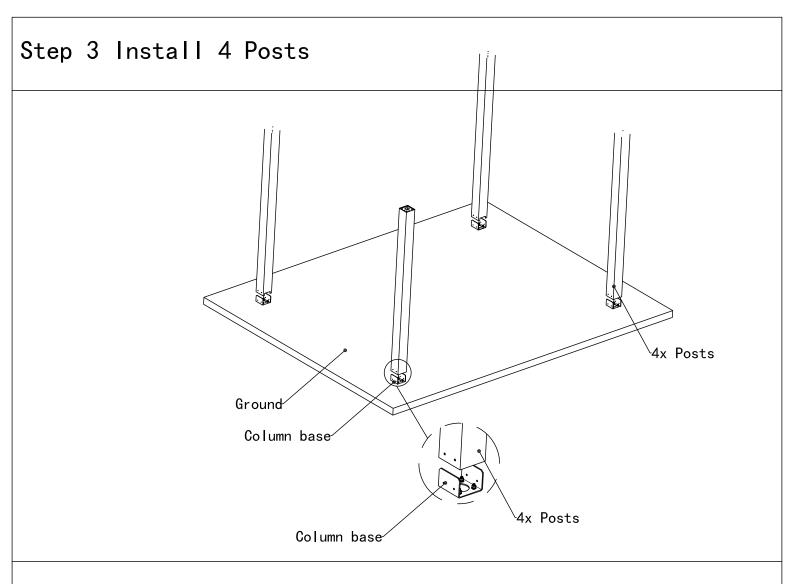


Step 4 Tighten the 4 Posts

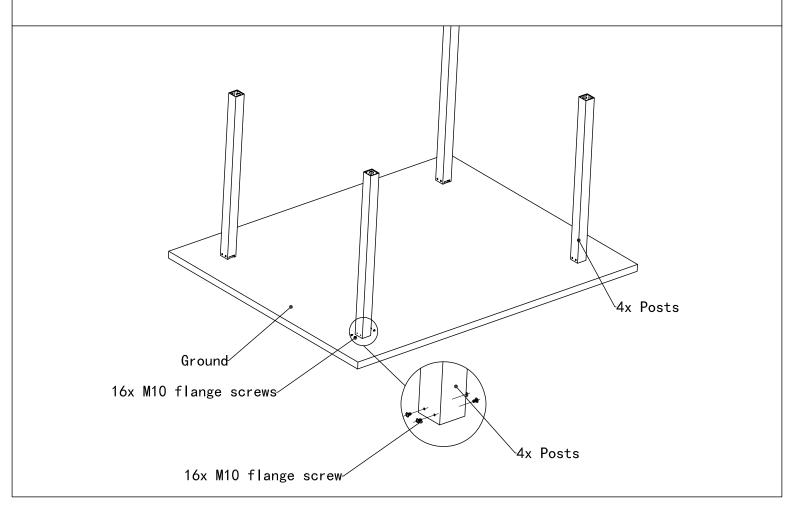


Step 5 Installing L-shaped corner codes

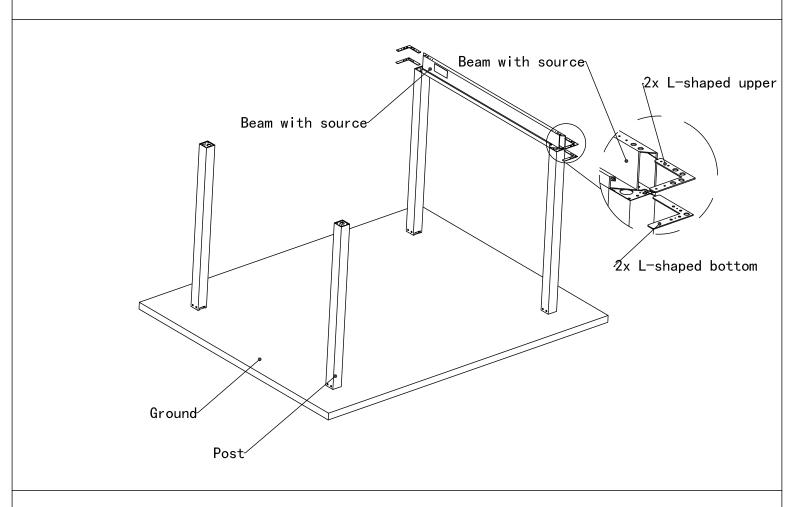


Step 6 Tighten the L-shaped upper

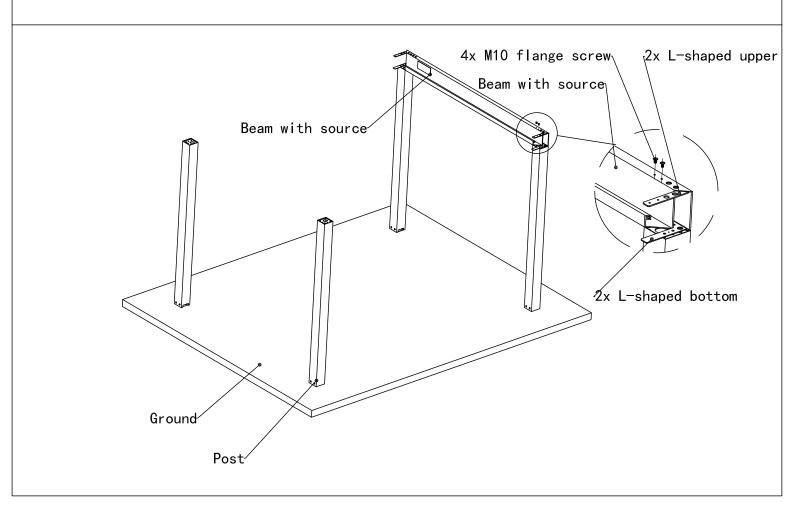


Step 7 Tighten the L-shaped bottom

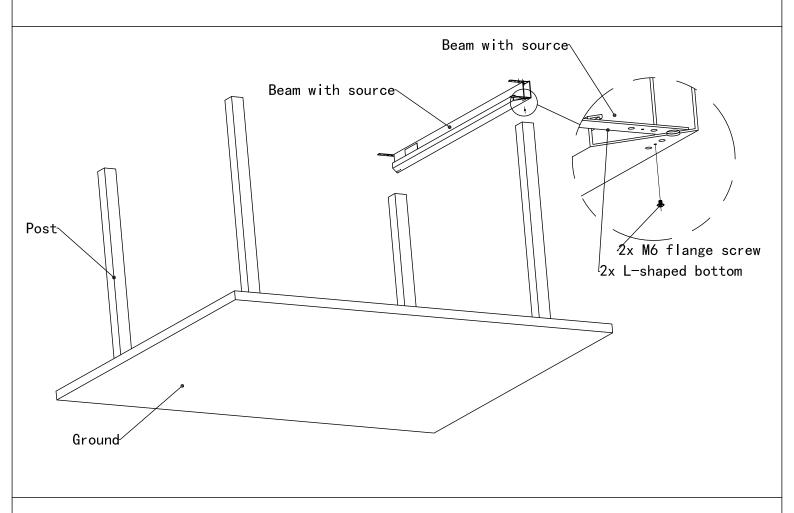


Step 8 Install 2x long beams

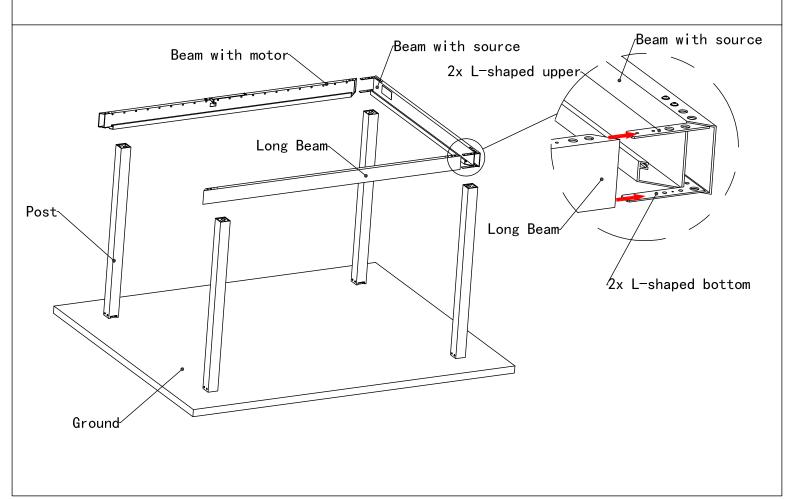


Step 9 Tighten the long beams

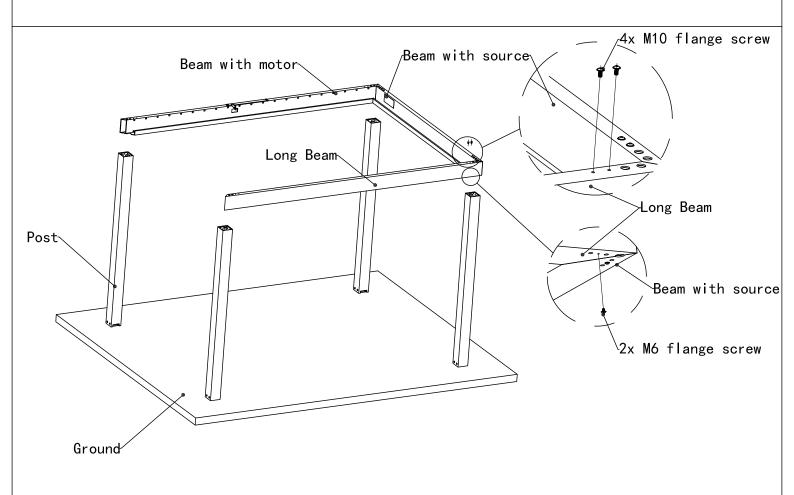


Step 10 Assembling short beams

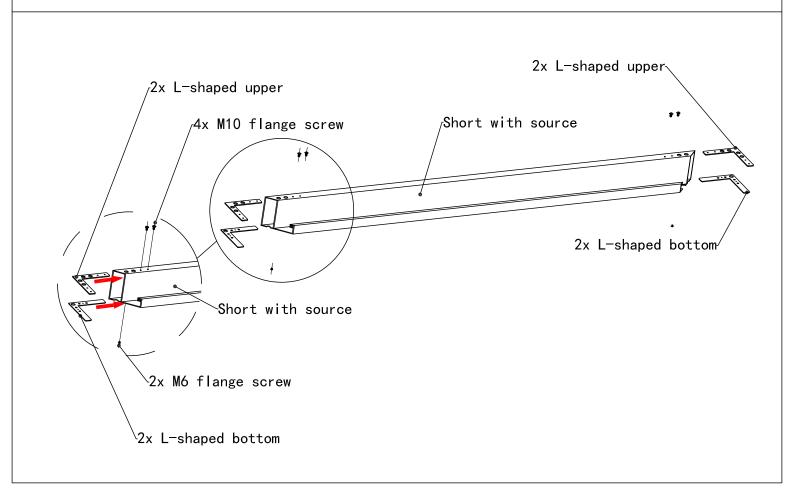


Step 11 Install Short beam

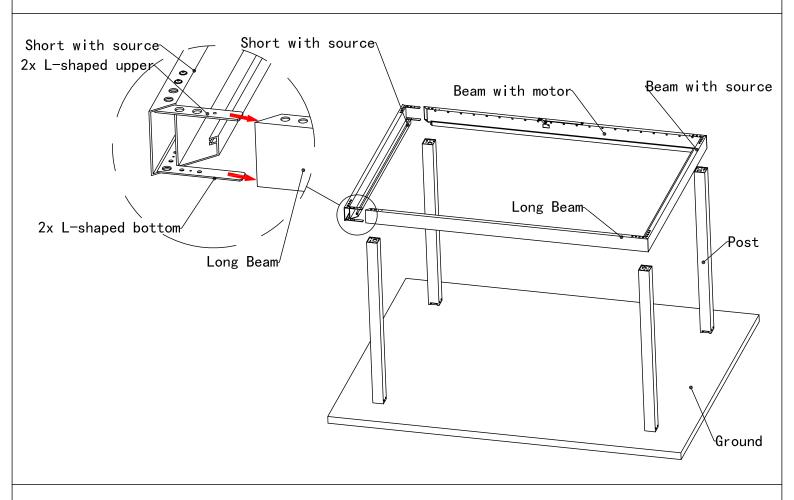


Step 12 Install short beams

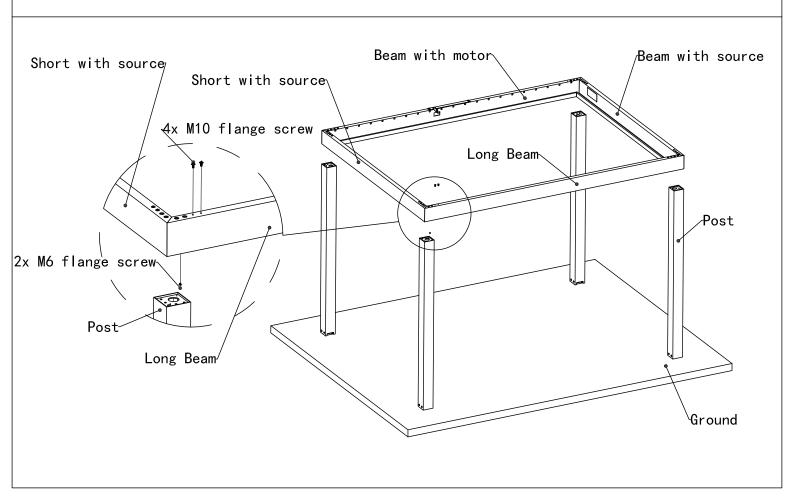


Step 13 Install Beams to Posts

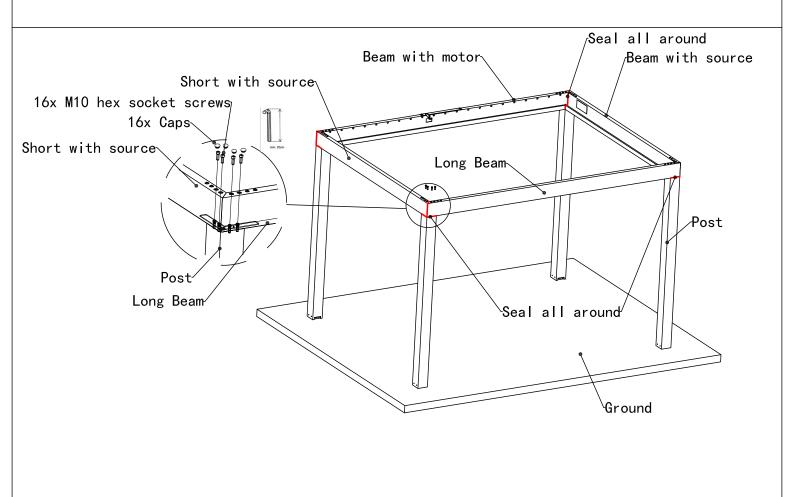


Step 14 Installing the transmission system

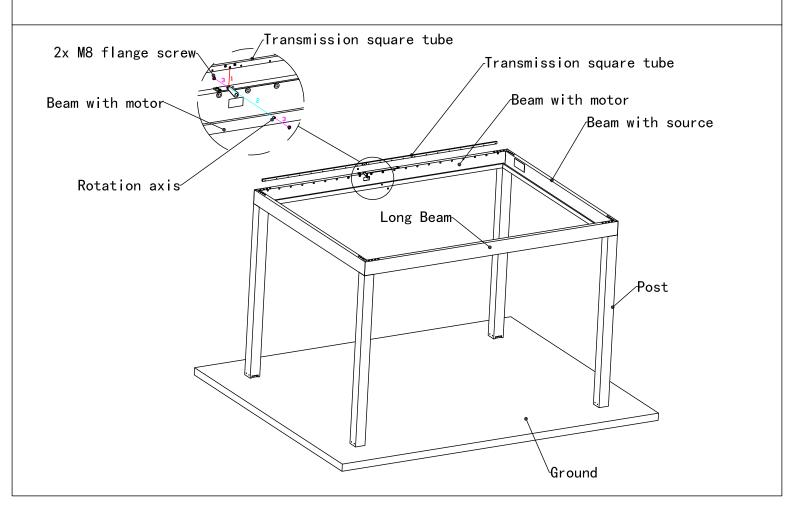



Glue application diagram

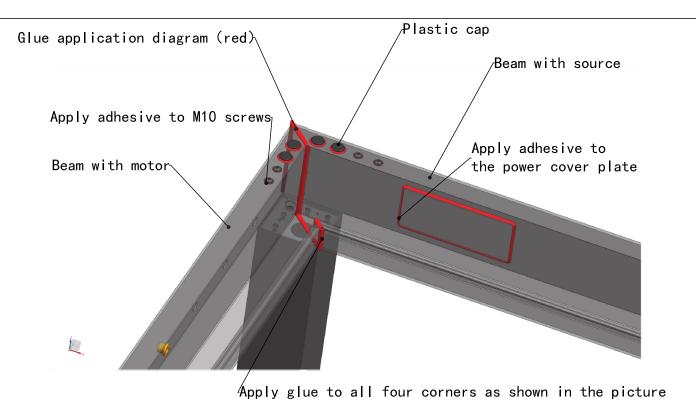

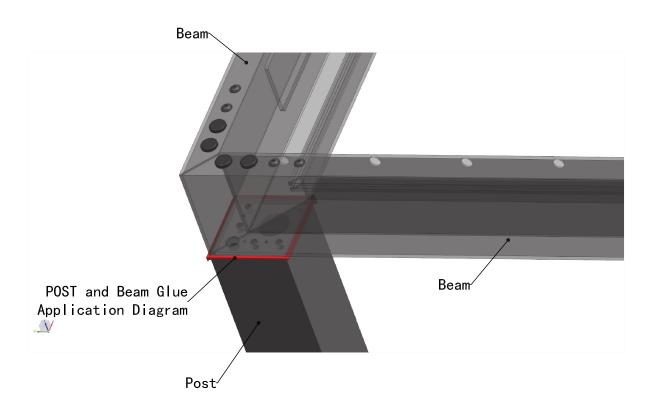


Glue application diagram

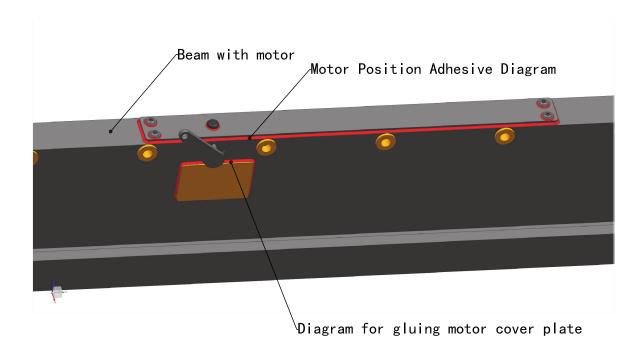


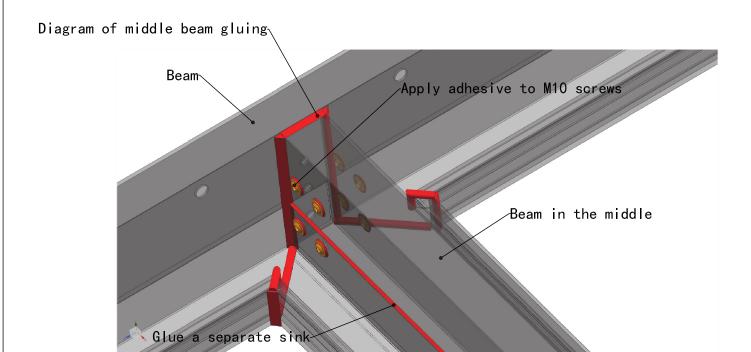


Step 15 Installing blades

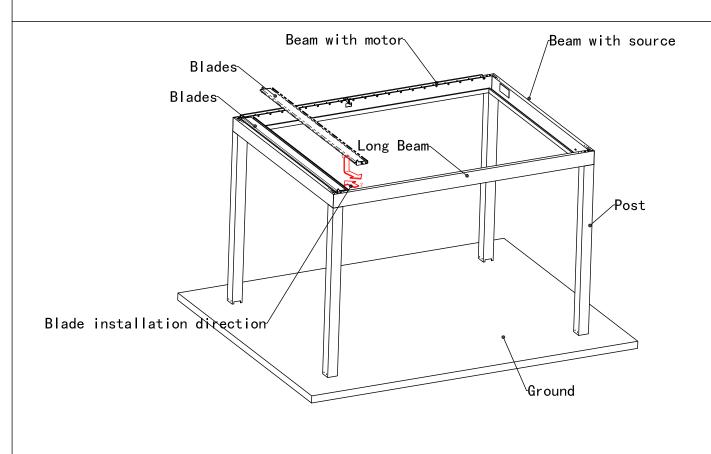


Step 16 Fixed blade

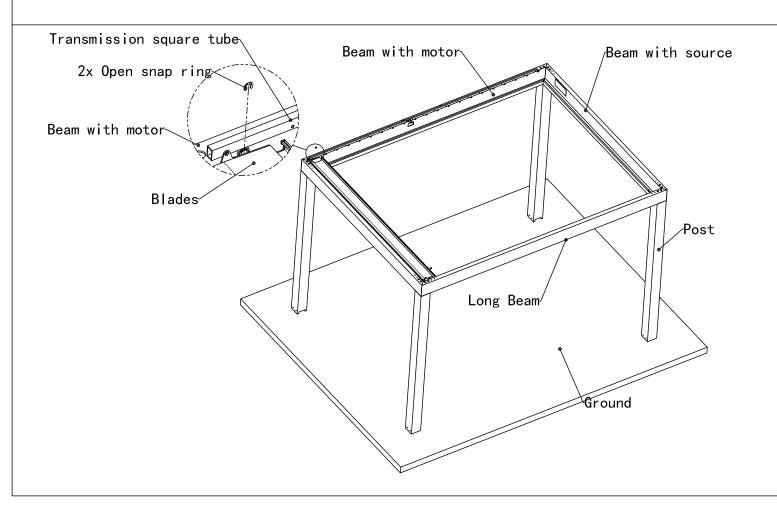


Step 17 Install the blades to the transmission system

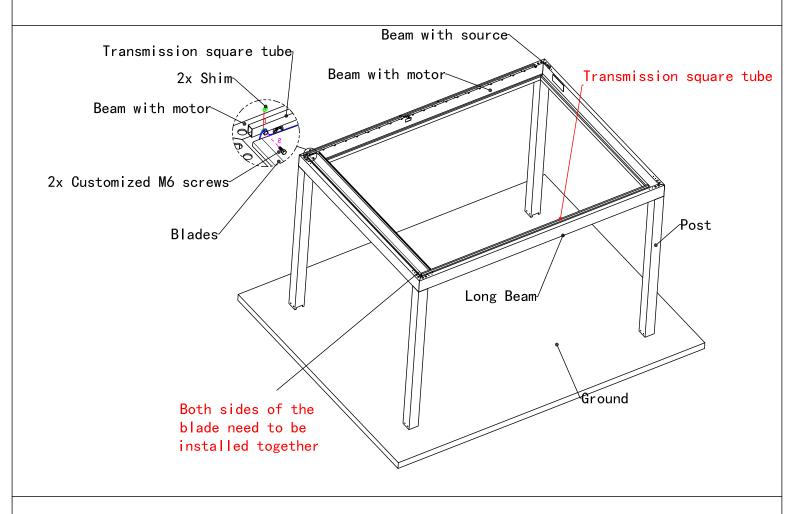


Step 18 Install the remaining blades as in step 15-17

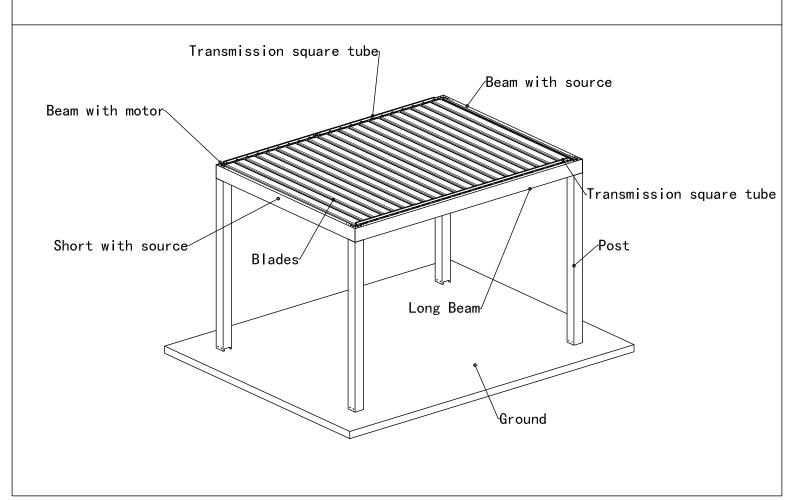


Step 19 Wall mounted installation

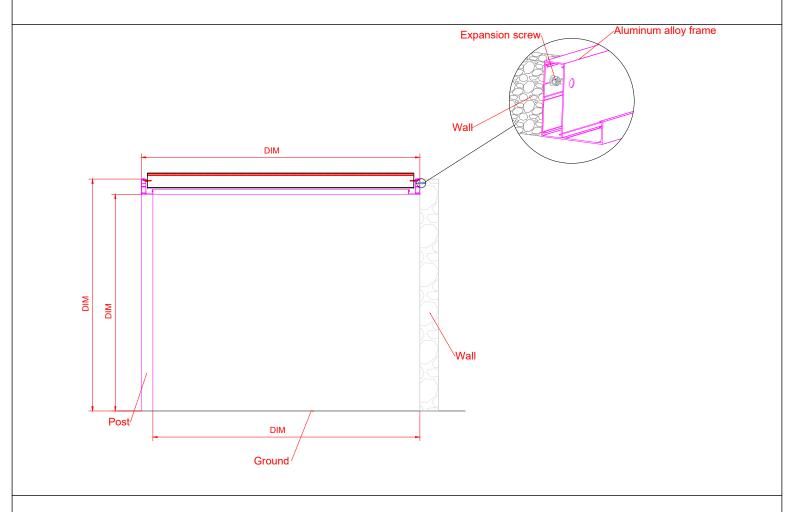


Step 20 Installation of beams in the middle

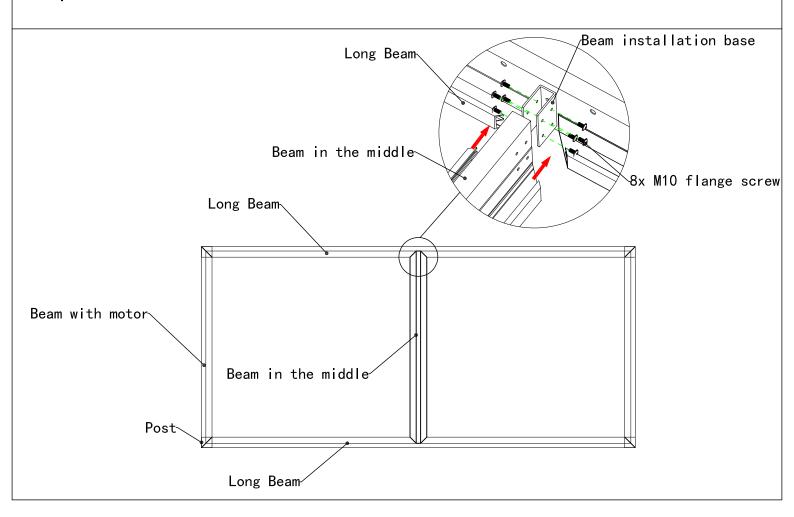


Step 21 Installation of manual blades and gearbox

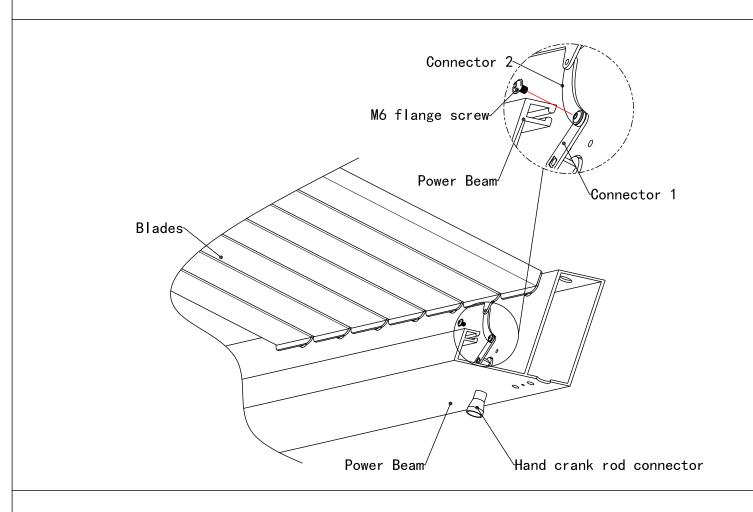

Step 22 Install the blades to the transmission system

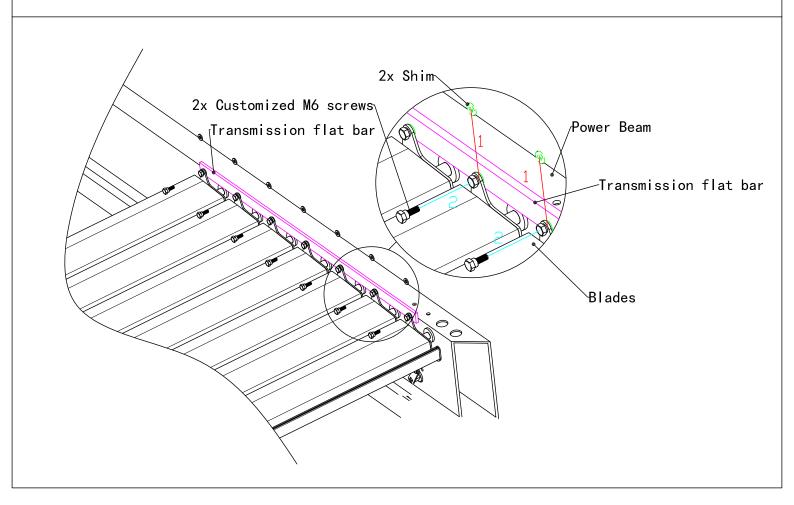

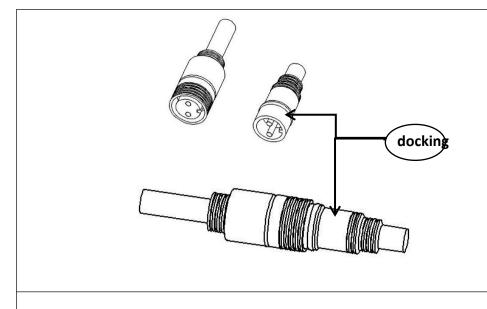


Plugged: position (1).

Connect plugs and sockets




The connector is properly connected and the arrow pointing on the connector is visible.

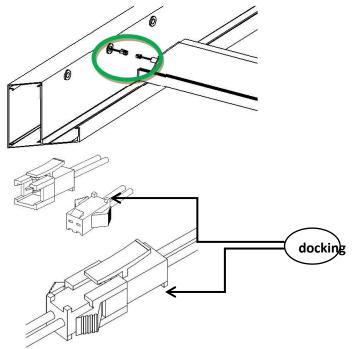

LED vane light: position (2).


Connect plugs and sockets

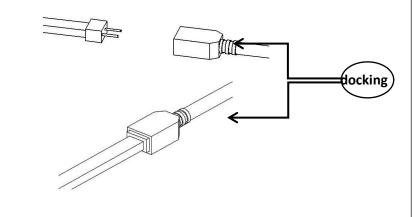

LED Aquarium light: location (water tank)



Connect the plug and socket on the connector, note that there are positive and negative directions! Test whether the sink light is lit in the forward and reverse directions!

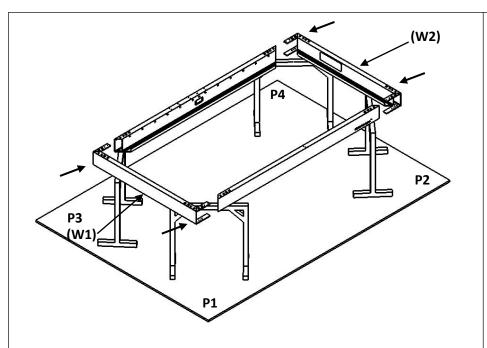


Test the cable connection

1.Combine side rail frames

Two side rails, W1 and W2, are inserted evenly and simultaneously into the longitudinal side rails.



Note: The cables in the side rails must not be damaged.

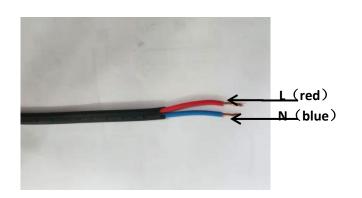

1. Connect to a power source


When assembling the frame, the power cord (3*2,5mm²) is connected to the power supply .





Only people with professional training can connect.


N-Zero line (blue line), L-live line (red line).

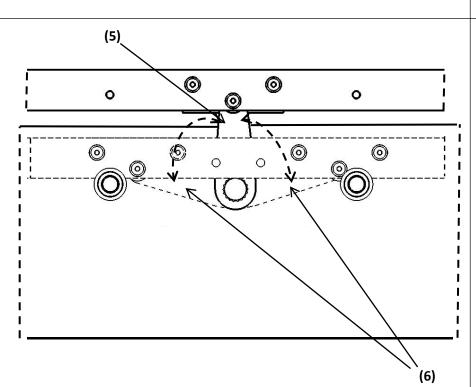

1 Test the motor drive

Using the remote control instructions, move the swingarm rocker (5) to the ends (6) position.

Follow the instructions for use of the remote control and place the swingarm stick (5) in a vertical position.

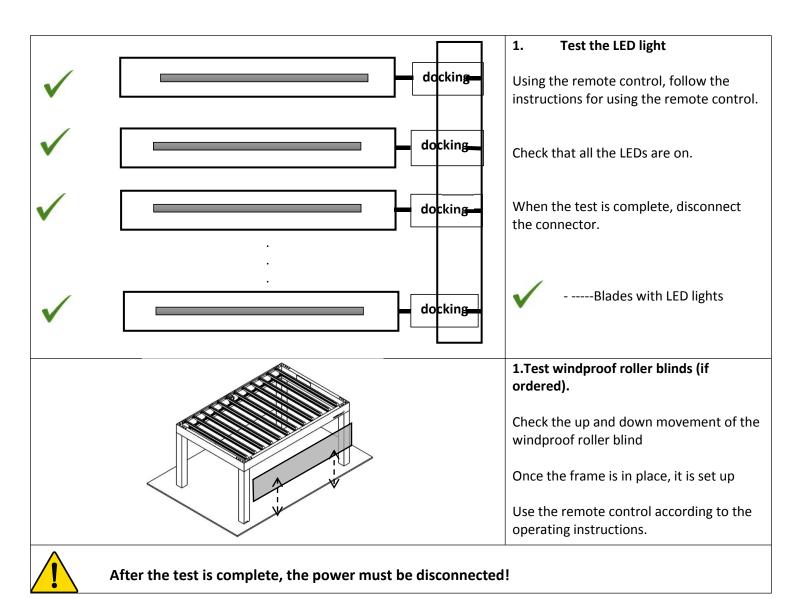

Motor base removal and maintenance:	Step 1: Remove the four screws M5 and two on the transmission square tube and the reversing arm M6;
	Step 2: Remove the cap Ø 10mm on the motor base;
	Step 3: Use an Allen wrench to remove the Allen M6 between the motor base and the commutation arm;
	Step 4: Pull out the reversing arm;

